

RFI-5G FE-Top SSV as run 13/11/2023 (2)

1. Document Scope

The objective of this document is to detail the procedures, results and conclusions to properly test at subsystem level the RFI-5G front-end top board. Several parts will be tested:

1. Test of the LNA chain
2. Test of the LO chain
3. Test of the Front-End top board RF
4. Test of the temperature sensor

The as run versions of this document will have the title as "RFI-5G FE-Top SSV as run dd/mm/yyyy".

2. Test of the LNA chain

2.1. Test Description and Objectives

The purpose of this test is to validate that the HMC342 LNA amplifier provides the expected +19 dB of gain for input signals between 24 to 25 GHz, and that the band-pass filter does not introduce more than the expected -4 dB of losses.

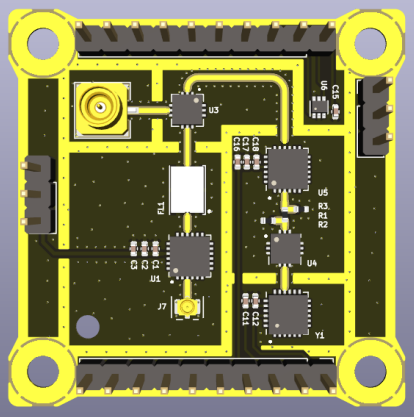

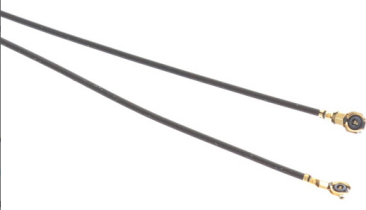



Since the probing used is not the frequency range used, this is only a qualitative test to check if the LNA is providing gain and validate that the consumption is nominal.

2.2. Requirements Verification

This test does not verify any requirement, and is only to check that the board part works as expected.

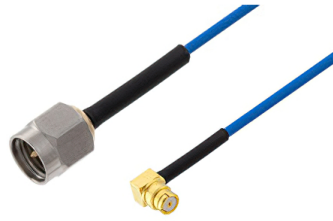
2.3. Test Set-Up

The required components for this test are the following:

RFI-5G front-end top board	 A photograph of a green printed circuit board (PCB) with a yellow border. The board is populated with various electronic components, including integrated circuits, capacitors, and connectors. It is mounted on a blue carrier board with four yellow circular mounting holes at the corners.
C.FL to SMA-2.92mm adapter	 A cylindrical metal adapter with a silver finish. It has a C.FL connector on one end and an SMA-2.92mm connector on the other.
C.FL cable	 A black flexible cable with two C.FL connectors at both ends.
RF probe	 A brass-colored RF probe with a threaded base and two thin metal pins extending from the top.
SMA 50 Ohm RF load	 A small, cylindrical metal component with a gold-colored finish, used for terminating an SMA connector.
DC Block N to SMA adapter	 A cylindrical metal adapter with a blue background. It has an N-type connector on one end and an SMA connector on the other. The body is silver with a knurled section. Text on the side includes "ATTN Inc P/N", "req 10M Hz", "SER P134003", and "SIDE 6100".

Power supply	 A Rohde & Schwarz NGE100 Power Supply Series unit. The digital display shows three output channels: 16.00 V 1.437 A, 32.00 V 1.000 A, and 5.00 V 2.000 A. The control panel includes a large rotary knob, several buttons, and three output terminals labeled Ch.1, Ch.2, and Ch.3.
Signal Generator capable of at least 25 GHz	 A Rohde & Schwarz SMW100 Signal Generator. It is a rack-mountable unit with a blue handle on the right. The front panel features a digital display, a large rotary knob, and various control buttons. The top of the unit is silver and shows some wear.
Spectrum Analyzer capable of at least 25 GHz	 A Rohde & Schwarz FSWP100 Spectrum Analyzer. It is a rack-mountable unit with a blue handle on the right. The front panel has a large color LCD screen, a rotary knob, and several buttons. The unit is mounted on a metal tray.
2x Jumper cables	 Two rainbow-colored jumper cables. Each cable has a multi-pin connector at one end and a different multi-pin connector at the other end.
2x Banana cables	 Two banana cables. One is red and the other is black. Each cable has a banana plug at one end and an SMA connector at the other end.
2x Crocodrile clips	 Two crocodile clips. One is red and the other is black. They are used for making temporary electrical connections.
2x SMA 2.92 mm cables	 Two SMA 2.92 mm cables. One is blue and the other is black. They have SMA connectors at both ends.

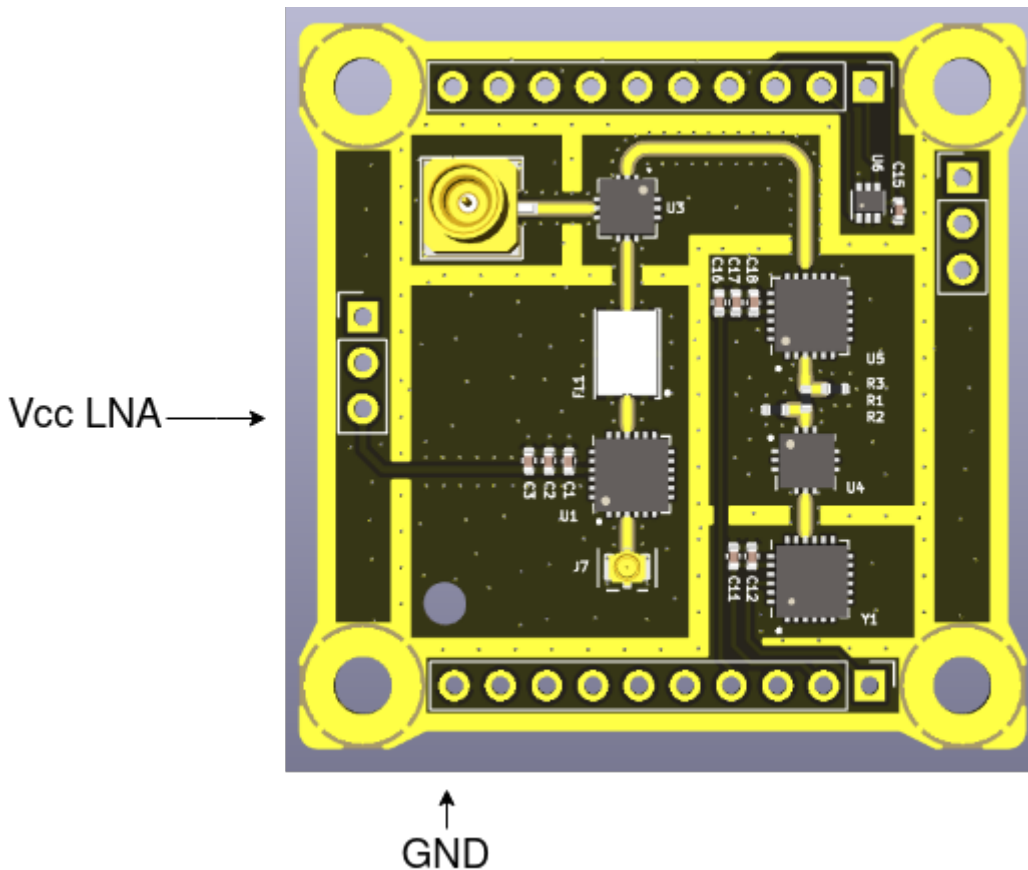
SMA to SMP cable



The steps to prepare the setup are the following:

1. Connect the output from the signal generator to the antenna input of the RFI-5G front-end top board by using the C.FL cable and the C.FL to 2.92 mm adapter.
2. Connect the power supply to the Vcc_LNA1 and GND pins with the jumper cables and the crocodile clips.
3. Connect the DC-block N to SMA adapter to the spectrum analyzer input.
4. Connect the RF probe to the spectrum analyzer using one SMA cable.
5. Connect the SMA 50 Ohm RF load to the output of the mixer with the SMA to SMP cable.

The diagram below represents the initial setup:



2.4. Pass/Fail Criteria

The test will be considered successful if the LNA shows to provide gain (~19 dB) and the power consumption matches the expected one (~43 mA at 3.3 V). There is though some margin accepted, since the RF probe and cables are not rated for the frequency range used.

2.5. Test Plan

Step ID	Description	Pass/Fail Criteria	Actual	Passed [Y/N]
RFI-5G-TOP-LNA-000	Make sure that the power supply and signal generator outputs are off.	Passes if power supply and signal generator outputs are off.		y
RFI-5G-TOP-LNA-010	Prepare the setup as stated in 2.3.	Passes if setup prepared.		y
RFI-5G-TOP-LNA-020	Set the power supply to 3 V and limit the current to 60 mA.	Passes if power supply set.		y
RFI-5G-TOP-LNA-030	Set the signal generator to: f = 24.5 GHz Pout = -70 dBm	Passes if signal generator set.		y
RFI-5G-TOP-LNA-040	Set the spectrum analyzer to: f = 24.5 GHz Span = 10 MHz RBW = 10 kHz VBW = 1 kHz Trace = Max Hold	Passes if spectrum analyzer set.		y
RFI-5G-TOP-LNA-050	Switch on the signal generator output.	Passes if signal generator output is on.		y
RFI-5G-TOP-LNA-060	Switch on the power supply. If the power supply is limiting switch it off immediately.	Passes if power supply is on and not current limiting.		y
RFI-5G-TOP-LNA-070	Note the voltage and current. If the current consumption is abnormal switch it off immediately.	Passes if voltage and current are within specification (some margin is allowed but has to be explained why).	Voltage:3V Current:42 mA	y
RFI-5G-TOP-LNA-080	With the RF probe, probe the input of the LNA by carefully touching with the signal pogo-pin the RF input pin of the LNA.	Passes if a signal is shown in the spectrum analyzer.	Does not detect with Pout -70 dBm. Increased to -50 dBm. Max hold of -66.69 dBm at center frequency	y
RFI-5G-TOP-LNA-090	Set the trace mode in the spectrum analyzer to VIEW to freeze the image.	Passes if trace mode is VIEW.		y

RFI-5G-TOP-LNA-100	Add a second trace in the spectrum analyzer with the same configuration as the first one.	Passes if spectrum analyzer set.		y
RFI-5G-TOP-LNA-110	With the RF probe, probe the output of the LNA by carefully touching with the signal pogo-pin the RF output pin of the LNA.	Passes if a signal is shown in the spectrum analyzer.	delta of 17.37 dB at center frequency	y
RFI-5G-TOP-LNA-120	Set the trace mode in the spectrum analyzer to VIEW to freeze the image.	Passes if trace mode is VIEW.		y
RFI-5G-TOP-LNA-130	Add one marker to the peak of trace 1, and another marker that measures the delta in the peak of trace 2. Note the gain and frequency delta values.	Passes if the gain is within specification (some margin is allowed but has to be explained why).	Gain: 17.37 dB Frequency: 0 Hz	y
RFI-5G-TOP-LNA-140	Capture the screen of the spectrum analyzer and save it into a USB drive.	Passes if .wmf is saved into a USB drive.	File name: "LNA1-3 131123.WMF"	y
RFI-5G-TOP-LNA-150	Add a third trace in the spectrum analyzer with the same configuration as the first one.	Passes if spectrum analyzer set.		y
RFI-5G-TOP-LNA-160	With the RF probe, probe the output of the band-pass filter by carefully touching with the signal pogo-pin the RF output pin of the filter.	Passes if the gain is within specification (some margin is allowed but has to be explained why).	delta of 14.41 dB, attenuation of 2.96 dB	y
RFI-5G-TOP-LNA-170	Set the trace mode in the spectrum analyzer to VIEW to freeze the image.	Passes if trace mode is VIEW.		y
RFI-5G-TOP-LNA-180	Add a third marker in trace 3. Note the power and frequency delta values with marker 1.	Passes if the gain is within specification (some margin is allowed but has to be explained why).	Gain: 14.41 dB Frequency: 0 Hz	n
RFI-5G-TOP-LNA-190	Capture the screen of the spectrum analyzer and save it into a USB drive.	Passes if .wmf is saved into a USB drive.	File name: "LNA1-4 131123.WMF"	y
RFI-5G-TOP-LNA-200	Switch off the power supply and the signal generator.	Passes if power supply and signal generator are off.		.y

RFI-5G-TOP-LNA-210	If all steps are passed, proceed with next test.	Passes if all steps passed.	y
--------------------	--	-----------------------------	---

2.6. Test Results

Description of the Test results with supporting data.

- Test name, test execution dates, the test facility used and the operators
- Test Logbooks
- “As-run” procedures (to be provided in annex)
- Test facility results (if applicable)
- Photographs relevant to the set-up(s) and inspection(s) (may also be added in the Conclusions to clarify a close-out judgement, e.g. for an inspection)
- Analysis of the test data and relevant assessment.
- Synthesis of the overall test results per verification (e.g. Vibration, Inspection 1, Inspection 2, etc.).

2.7. Anomalies

Pout = -50 dBm not -70 dBm.

Measures must be taken on the same point on the wire (stripline), since they vary depending on where they are taken from.

List of deviations to the Test Specification and Procedure and non-conformances witnessed during the test campaign, including a brief description, the close-out status and reference to the relevant reports.

2.8. Conclusions

LNA gain is expected, filter attenuation is within expected values.

The Conclusions shall include (where needed as annex):

1. Test results, including as a minimum:
 - Requirement to be verified
 - Subsections of test campaign in which that requirement was verified (e.g. Thermal Vacuum RFT 1, Inspection 1, Inspection 2, ...)
 - Close-out judgement (compliance status) and rationale, per subsection of the test

- Traceability to used documentation
 - Conformance or deviation including references
2. Overall conclusion on the success of the test, including clearly stated and described open issues and possible remediating actions.
 3. Test Readiness Review minutes and Post Test Review minutes

3. Test of the LO chain

3.1. Test Description and Objectives

The purpose of this test is to validate that the LO chain works as intended. This means that the HMC506 VCO provides a tone at the expected 8665.5 MHz, and that the HMC342 LO amplifier provides gain (~19 dB) so that the LO input of the mixer is over 12 dBm (~14 dBm).

Since the probing used is not the frequency range used, this is only a qualitative test to check if the LO chain is providing the correct LO tone to the mixer and that the consumption is nominal.

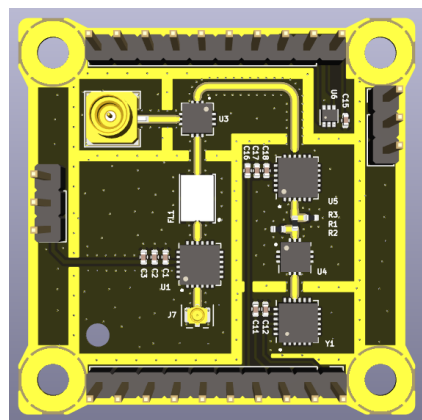
3.2. Requirements Verification


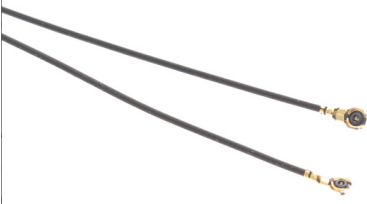






This test does not verify any requirement, and is only to check that the board part works as expected.



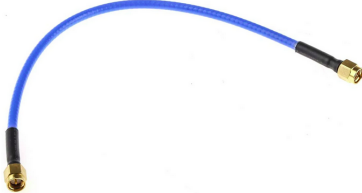
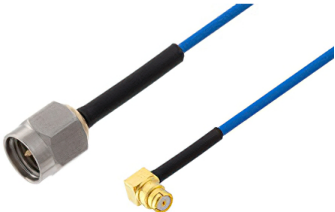
3.3. Test Set-Up

The required components for this test are the following:

RFI-5G front-end top board



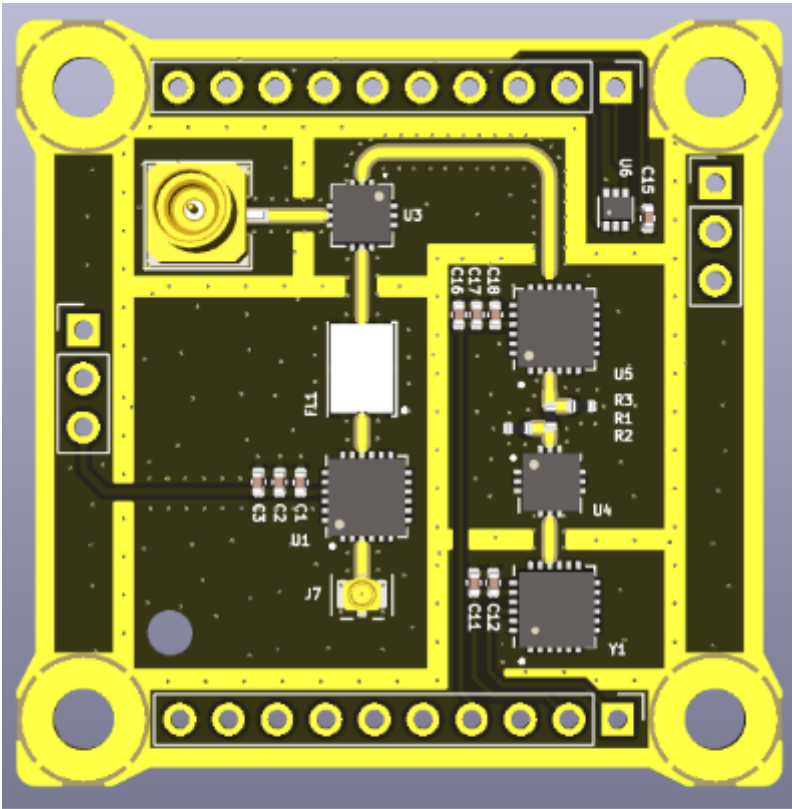
C.FL to SMA-2.92mm adapter	
C.FL cable	
RF probe	
SMA 50 Ohm RF load	
DC Block N to SMA adapter	
Power supply	
Spectrum Analyzer capable of at least 25 GHz	
6x Jumper cables	

6x Banana cables	
6x Crocodile clips	
2x SMA 2.92 mm cables	
SMA to SMP cable	

The steps to prepare the setup are the following:

1. Connect the output from the signal generator to the antenna input of the RFI-5G front-end top board by using the C.FL cable and the C.FL to 2.92 mm adapter.
2. Connect the first channel of the power supply to the Vcc_VCO and GND pins with the jumper cables and the crocodile clips.
3. Connect the second channel of the power supply to the Vtune1 and GND pins with the jumper cables and the crocodile clips.
4. Connect the third channel of the power supply to the Vcc_IF1Amp and GND pins with the jumper cables and the crocodile clips.
5. Connect the DC-block N to SMA adapter to the spectrum analyzer input.
6. Connect the RF probe to the spectrum analyzer using one SMA cable.
7. Connect the SMA 50 Ohm RF load to the output of the mixer with the SMA to SMP cable.

The diagram below represents the initial setup:



GND ↑

Vcc_LO1Amp ↑

Vcc_VCO ↑
VTUNE1 ↑

3.4. Pass/Fail Criteria

The test will be considered successful if the LO shows a tone at 8665.5 MHz \pm 5%, if the LO amplifier provides the expected gain (\sim 19 dB) and if the level of the LO input of the mixer is over 10 dBm. Additionally, the current consumption has to be nominal.

3.5. Test Plan

Step ID	Description	Pass/Fail Criteria	Actual	Passed [Y/N]
RFI-5G-TOP-LO-000	Make sure that the power supply is off.	Passes if power supply and signal generator outputs are off.		y
RFI-5G-TOP-LO-010	Prepare the setup as stated in 3.3.	Passes if setup prepared.		

RFI-5G-TOP-LO-020	Set the first channel of the power supply to 3 V and limit the current to 100 mA.	Passes if power supply set.		
RFI-5G-TOP-LO-030	Set the second channel of the power supply to 8.7 V and limit the current to 10 mA.	Passes if power supply set.		
RFI-5G-TOP-LO-040	Set the third channel of the power supply to 3 V and limit the current to 60 mA.	Passes if power supply set.		
RFI-5G-TOP-LO-050	Set the spectrum analyzer to: f = 8665.5 MHz Span = 100 MHz RBW = 100 kHz VBW = 3 kHz Trace = Clear/Write	Passes if spectrum analyzer set.		
RFI-5G-TOP-LO-060	Switch on the first channel of the power supply. If the power supply is limiting switch it off immediately.	Passes if power supply is on and not current limiting.		
RFI-5G-TOP-LO-070	Switch on the first channel of the power supply. If the power supply is limiting switch it off immediately.	Passes if power supply is on and not current limiting.		
RFI-5G-TOP-LO-080	Note the voltage and current. If the current consumption is abnormal switch it off immediately.	Passes if voltage and current are within specification (some margin is allowed but has to be explained why)	CH1 Voltage: Current: CH2 Voltage: Current:	
RFI-5G-TOP-LO-080	With the RF probe, probe the output of the VCO by carefully touching with the signal pogo-pin the RF output pin of the LNA.	Passes if a signal is shown in the spectrum analyzer.		
RFI-5G-TOP-LO-090	Adjust the Vtune1 voltage until the LO frequency is centered to the desired 8665.5 MHz.	Passes if LO frequency is ~8665.5 MHz.	CH2 Voltage: frequency:	

RFI-5G-TOP-LO-100	Set the trace mode in the spectrum analyzer to VIEW to freeze the image.	Passes if trace mode is VIEW.		
RFI-5G-TOP-LO-110	Capture the screen of the spectrum analyzer and save it into a USB drive.	Passes if .wmf is saved into a USB drive.	File name:	
RFI-5G-TOP-LO-120	Set the trace mode in the spectrum analyzer to CLEAR/WRITE to clear the spectrum.	Passes if trace mode is CLEAR/WRITE.		
RFI-5G-TOP-LO-130	Set the spectrum analyzer to: f = 17331 MHz Span = 200 MHz RBW = 100 kHz VBW = 3 kHz Reference level = 10 dBm Trace = Max Hold	Passes if spectrum analyzer set.		
RFI-5G-TOP-LO-140	With the RF probe, probe the output of the frequency multiplier by carefully touching with the signal pogo-pin the RF output pin of the frequency multiplier.	Passes if a signal is shown in the spectrum analyzer.		
RFI-5G-TOP-LO-150	Set the trace mode in the spectrum analyzer to VIEW to freeze the image.	Passes if trace mode is VIEW.		
RFI-5G-TOP-LO-160	Add one marker at the peak. Note the power and frequency values.	Passes if power and frequency are within specification.	Power: Frequency:	
RFI-5G-TOP-LO-170	Add a second trace in the spectrum analyzer with the same configuration as the first one.	Passes if spectrum analyzer set.		
RFI-5G-TOP-LO-180	Switch on the third channel of the power supply. If the power supply is limiting switch it off immediately.	Passes if power supply is on and not current limiting.		

RFI-5G-TOP-LO-190	Note the voltage and current. If the current consumption is abnormal switch it off immediately.	Passes if voltage and current are within specification (some margin is allowed but has to be explained why)	CH3 Voltage: Current:	
RFI-5G-TOP-LO-200	With the RF probe, probe the output of the LO amplifier by carefully touching with the signal pogo-pin the RF output pin of the LO amplifier.	Passes if a signal is shown in the spectrum analyzer.		
RFI-5G-TOP-LO-210	Set the trace mode in the spectrum analyzer to VIEW to freeze the image.	Passes if trace mode is VIEW.		
RFI-5G-TOP-LO-220	Add one marker to the peak of trace 1, and another marker that measures the delta in the peak of trace 2. Note the power and frequency delta values.	Passes if the gain is within specification (some margin is allowed but has to be explained why).	Power: Frequency:	
RFI-5G-TOP-LO-230	Capture the screen of the spectrum analyzer and save it into a USB drive.	Passes if .wmf is saved into a USB drive.	File name:	
RFI-5G-TOP-LO-240	Switch off the power supply and the signal generator.	Passes if power supply and signal generator are off.		
RFI-5G-TOP-LO-250	If all steps are passed, proceed with next test.	Passes if all steps passed.		

3.6. Test Results

Description of the Test results with supporting data.

- Test name, test execution dates, the test facility used and the operators
- Test Logbooks
- “As-run” procedures (to be provided in annex)
- Test facility results (if applicable)
- Photographs relevant to the set-up(s) and inspection(s) (may also be added in the Conclusions to clarify a close-out judgement, e.g. for an inspection)
- Analysis of the test data and relevant assessment.
- Synthesis of the overall test results per verification (e.g. Vibration, Inspection 1, Inspection 2, etc.).

3.7. Anomalies

List of deviations to the Test Specification and Procedure and non-conformances witnessed during the test campaign, including a brief description, the close-out status and reference to the relevant reports.

3.8. Conclusions

The Conclusions shall include (where needed as annex):

1. Test results, including as a minimum:
 - Requirement to be verified
 - Subsections of test campaign in which that requirement was verified (e.g. Thermal Vacuum RFT 1, Inspection 1, Inspection 2, ...)
 - Close-out judgement (compliance status) and rationale, per subsection of the test
 - Traceability to used documentation
 - Conformance or deviation including references
2. Overall conclusion on the success of the test, including clearly stated and described open issues and possible remediating actions.
3. Test Readiness Review minutes and Post Test Review minutes

4. Test of the Front-end Top board RF

4.1. Test Description and Objectives

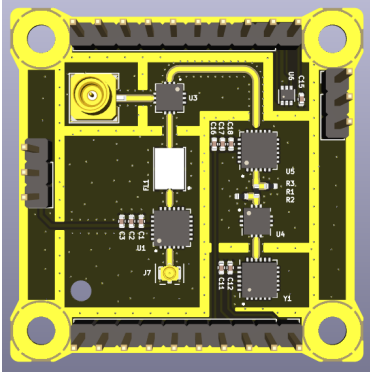

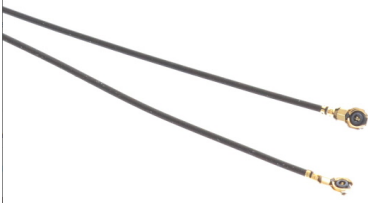


The purpose of this test is to validate the correct functioning of the RF part of the RFI-5G front-end top, i.e., with an input signal between 24-25 GHz, the signal is down-converted to an intermediate signal with frequency between 6669-76669 MHz, with a net gain of 5 dB.

4.2. Requirements Verification

This test does not verify any requirement, and is only to check that the board part works as expected.

4.3. Test Set-Up

The required components for this test are the following:

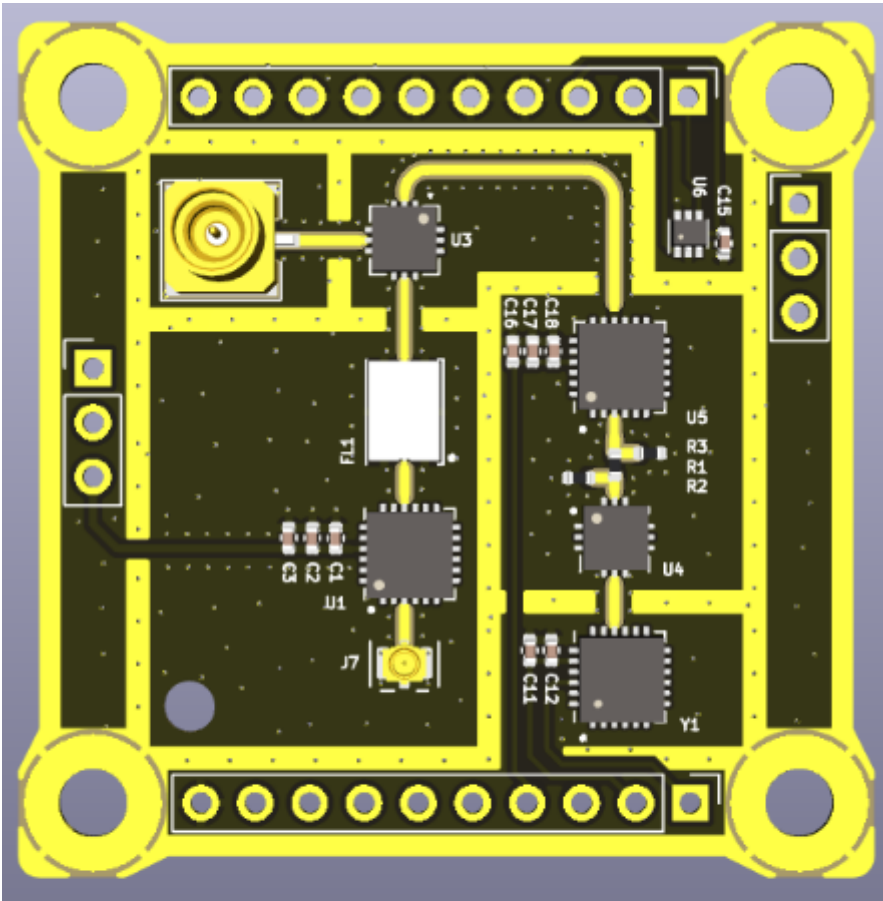
RFI-5G front-end top board	 A photograph of a green printed circuit board (PCB) with various electronic components. The board is populated with several integrated circuits, capacitors, and other surface-mount components. It has a yellow border and four yellow circular markers at the corners.
RFI-5G interface board with inverse connectors	
C.FL to SMA-2.92mm adapter	 A cylindrical metal adapter with a silver finish. It has a C.FL connector on one end and an SMA-2.92mm connector on the other.
C.FL cable	 A black flexible cable with two C.FL connectors at the ends.
DC Block N to SMA adapter	 A cylindrical metal adapter with a silver finish. It has an N-type connector on one end and an SMA connector on the other. The text on the adapter includes "ATM Inc. P/N", "SER P-131003", "REQ 10M-Hz", and "INSIDE 5100".
Power supply	 A Rohde & Schwarz NGE150 Power Supply Series unit. The display shows three channels: Channel 1 at 16.00 V and 1.437 A, Channel 2 at 32.00 V and 1.000 A, and Channel 3 at 5.00 V and 2.000 A. The unit has a digital display, several buttons, and three output terminals (D1, D2, D3).

Signal Generator capable of at least 25 GHz	
Spectrum Analyzer capable of at least 25 GHz	
2x Banana cables	
SMA 2.92 mm cables	
SMA to SMP cable	

The steps to prepare the setup are the following:

1. Mate the RFI-5G front-end top board with the RFI-5G interface board that has the inverse pin header.
2. Connect the EGSE to the power supply with the banana cables.
3. Connect the output from the signal generator to the antenna input of the RFI-5G front-end top board by using the C.FL cable and the C.FL to 2.92 mm adapter.
4. Connect the DC-block N to SMA adapter to the spectrum analyzer input.
5. Connect the RFI-5G front-end top board output to the spectrum analyzer using the SMA to SMP cable.

The diagram below represents the initial setup:



GND ↑

PoL ↑

4.4. Pass/Fail Criteria

The test will be considered successful if the output of the RFI-5G front-end top board is a signal between 6669-7669 MHz when the antenna input is between 24-25 GHz, and the board provides a net gain of +5 dB. Additionally, the current consumption has to be nominal.

4.5. Test Plan

Step ID	Description	Pass/Fail Criteria	Actual	Passed [Y/N]
RFI-5G-TOP-RF-000	Make sure that the power supply and signal generator outputs are off.	Passes if power supply and signal generator outputs are off.		
RFI-5G-TOP-RF-010	Prepare the setup as stated in 4.3.	Passes if setup prepared.		

RFI-5G-TOP-RF-020	Set the first channel of the power supply to 3.3 V and limit the current to 200 mA.	Passes if power supply set.		
RFI-5G-TOP-RF-030	Set the spectrum analyzer to: f = 7169 MHz Span = 200 MHz RBW = 100 kHz VBW = 3 kHz Reference level = -20 dBm Trace = Clear/Write	Passes if spectrum analyzer set.		
RFI-5G-TOP-RF-040	Set the signal generator to: f = 24.5 GHz Pout = -80 dBm	Passes if signal generator set.		
RFI-5G-TOP-RF-050	Switch on the first channel of the power supply. If the power supply is limiting switch it off immediately.	Passes if power supply is on and not current limiting.		
RFI-5G-TOP-RF-060	Note the voltage and current. If the current consumption is abnormal switch it off immediately.	Passes if voltage and current are within specification (some margin is allowed but has to be explained why).	Voltage: Current:	
RFI-5G-TOP-RF-070	Enable the output of the signal generator.	Passes if signal generator output is enabled.		
RFI-5G-TOP-RF-080	Note the voltage and current. If the current consumption is abnormal switch it off immediately.	Passes if voltage and current are same as in RFI-5G-TOP-RF-060.	Voltage: Current:	
RFI-5G-TOP-RF-090	Add one marker at the peak. Note the frequency and power of the intermediate signal. Additionally compute the net gain and the frequency shift.	Passes if the net gain is +5 dB and the frequency shift of 17331 MHz.	frequency = Power = frequency shift = Gain =	
RFI-5G-TOP-RF-100	Set the trace mode in the spectrum analyzer to VIEW to freeze the image.	Passes if trace mode is VIEW.		
RFI-5G-TOP-RF-110	Capture the screen of the spectrum analyzer and save it into a USB drive.	Passes if .wmf is saved into a USB drive.	File name:	

RFI-5G-TOP-RF-120	Set the trace mode in the spectrum analyzer to CLEAR/WRITE to clear the spectrum.	Passes if trace mode is CLEAR/WRITE.		
RFI-5G-TOP-RF-130	Switch off the output of the signal generator.	Passes if signal generator output is off.		
RFI-5G-TOP-RF-140	Set the spectrum analyzer to: f = 7169 MHz Span = 1200 MHz RBW = 300 kHz VBW = 30 kHz Trace = Max Hold	Passes if spectrum analyzer set.		
RFI-5G-TOP-RF-150	Set the signal generator to: Mode = frequency sweep f = 24.5 GHz Span = 1 GHz Step = 10 MHz P = -80 dBm	Passes if signal generator set.		
RFI-5G-TOP-RF-160	Switch on the output of the signal generator.	Passes if signal generator output is on.		
RFI-5G-TOP-RF-170	Wait until a complete frequency sweep is done.	Passes when complete frequency sweep finishes.		
RFI-5G-TOP-RF-180	Check qualitatively the flatness of the RFI-5G front-end top board RF output.	Passes if the RF output is "flat".		
RFI-5G-TOP-RF-190	Set the trace mode in the spectrum analyzer to VIEW to freeze the image.	Passes if trace mode is VIEW.		
RFI-5G-TOP-RF-200	Capture the screen of the spectrum analyzer and save it into a USB drive.	Passes if .wmf is saved into a USB drive.	File name:	
RFI-5G-TOP-RF-210	Switch off the power supply and the signal generator.	Passes if power supply and signal generator are off.		
RFI-5G-TOP-RF-220	If all steps are passed, proceed with next test.	Passes if all steps passed.		

4.6. Test Results

Description of the Test results with supporting data.

- Test name, test execution dates, the test facility used and the operators
- Test Logbooks
- “As-run” procedures (to be provided in annex)
- Test facility results (if applicable)
- Photographs relevant to the set-up(s) and inspection(s) (may also be added in the Conclusions to clarify a close-out judgement, e.g. for an inspection)
- Analysis of the test data and relevant assessment.
- Synthesis of the overall test results per verification (e.g. Vibration, Inspection 1, Inspection 2, etc.).

4.7. Anomalies

List of deviations to the Test Specification and Procedure and non-conformances witnessed during the test campaign, including a brief description, the close-out status and reference to the relevant reports.

4.8. Conclusions

The Conclusions shall include (where needed as annex):

1. Test results, including as a minimum:
 - Requirement to be verified
 - Subsections of test campaign in which that requirement was verified (e.g. Thermal Vacuum RFT 1, Inspection 1, Inspection 2, ...)
 - Close-out judgement (compliance status) and rationale, per subsection of the test
 - Traceability to used documentation
 - Conformance or deviation including references
2. Overall conclusion on the success of the test, including clearly stated and described open issues and possible remediating actions.
3. Test Readiness Review minutes and Post Test Review minutes

5. Test of the temperature sensor

5.1. Test Description and Objectives

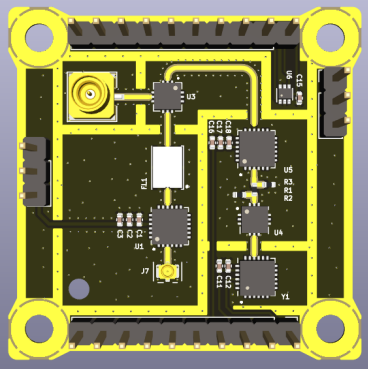
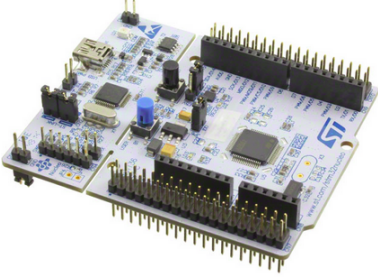

The purpose of this test is to validate the correct functioning of temperature sensor in the RFI-5G front-end top board, and that the sensor library code functions correctly.




5.2. Requirements Verification

This test does not verify any requirement, and is only to check that the board part works as expected.

5.3. Test Set-Up

The required components for this test are the following:

RFI-5G front-end top board	 A photograph of the RFI-5G front-end top board, a green printed circuit board (PCB) with various electronic components, including a central microcontroller, several integrated circuits, and connectors. The board is shown from a top-down perspective.
RFI-5G interface board with inverse connectors	
RFI-5G EGSE	
STM32 Nucleo-L476RG board	 A photograph of the STM32 Nucleo-L476RG board, a blue PCB with a white microcontroller chip, various passive components, and a USB Type-A connector. The board is shown from a top-down perspective.
USB A-to-mini cable	 A photograph of a black USB A-to-mini cable, showing the standard USB Type-A connector on one end and the mini-USB connector on the other.

Power supply	
2x Banana cables	
2x Jumper cables	
Temperature sensor test code	NA

The steps to prepare the setup are the following:

1. Mate the RFI-5G front-end top board with the RFI-5G interface board that has the inverse pin header.
2. Connect the EGSE to the power supply with the banana cables.
3. Connect the output from the signal generator to the antenna input of the RFI-5G front-end top board by using the C.FL cable and the C.FL to 2.92 mm adapter.
4. Connect the DC-block N to SMA adapter to the spectrum analyzer input.
5. Connect the RFI-5G front-end top board output to the spectrum analyzer using the SMA to SMP cable.

The diagram below represents the initial setup:

Missing setup picture

5.4. Pass/Fail Criteria

Description of which metric is used to perform the test and when it is considered that the test passed or not. If different metrics are used, it is important to define when the test passed or not (e.g. when all the metrics are in the pass criteria, or when only one of them).

5.5. Test Plan

This section includes the test sequence necessary to do the test. The test sequence must include all the steps, from the set-up up to the conclusion of the test.

5.6. Test Results

Description of the Test results with supporting data.

- Test name, test execution dates, the test facility used and the operators
- Test Logbooks
- “As-run” procedures (to be provided in annex)
- Test facility results (if applicable)
- Photographs relevant to the set-up(s) and inspection(s) (may also be added in the Conclusions to clarify a close-out judgement, e.g. for an inspection)
- Analysis of the test data and relevant assessment.
- Synthesis of the overall test results per verification (e.g. Vibration, Inspection 1, Inspection 2, etc.).

5.7. Anomalies

List of deviations to the Test Specification and Procedure and non-conformances witnessed during the test campaign, including a brief description, the close-out status and reference to the relevant reports.

5.8. Conclusions

The Conclusions shall include (where needed as annex):

1. Test results, including as a minimum:
 - Requirement to be verified
 - Subsections of test campaign in which that requirement was verified (e.g. Thermal Vacuum RFT 1, Inspection 1, Inspection 2, ...)
 - Close-out judgement (compliance status) and rationale, per subsection of the test

- Traceability to used documentation
 - Conformance or deviation including references
2. Overall conclusion on the success of the test, including clearly stated and described open issues and possible remediating actions.
 3. Test Readiness Review minutes and Post Test Review minutes
-

Revision #1

Created 15 November 2024 18:34:53 by roger.almirall

Updated 15 November 2024 18:53:04 by roger.almirall